



Truck Bumpers


Overview



- Alliance value & warranty
- Truly ALL MAKES offering
- 155+ models available
- The most styles to choose
- Industry-leading customization
- PDC availability
- Short lead times
- Made in North America (USA)



Makes Available

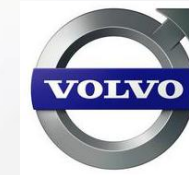


Warranties



Chrome

One year warranty


Available in 7-gauge or 10-gauge
for most styles

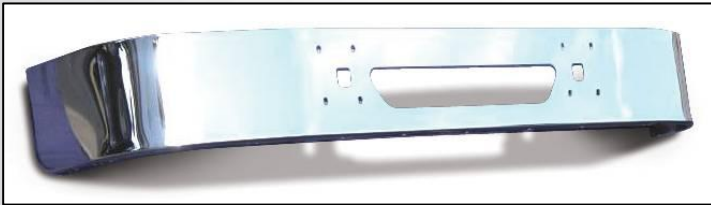

Stainless

5 year warranty


Made from 11-gauge 304 stainless

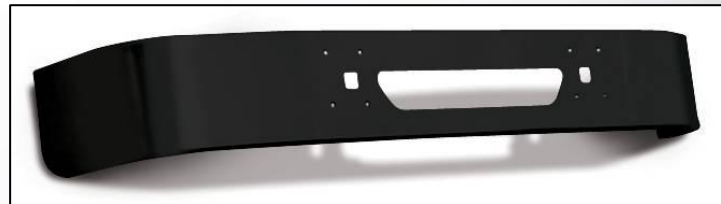

Painted

One year warranty

Available in 7-gauge or 10-gauge
for most styles

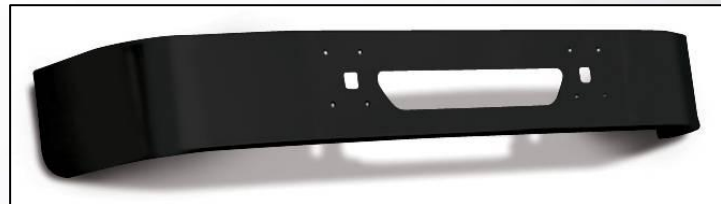

Direct Ship Lead Times



Time for parts to ship from factory:

Stock Orders
24 Hrs.

Standard Parts
7 days or less

Custom Parts
10 days or less


+ transit time

Direct Ship Freight



- **No minimum order required**
- **Ship from Clovis, CA**
- **Canada Freight Policy:**
 - 12+ bumpers = prepaid**
 - 7-11 bumpers = \$50 each (prepay & add)**
 - 2-6 bumpers = \$75 each (prepay & add)**
 - 1 bumper = \$150 (prepay & add)**

Print Catalog

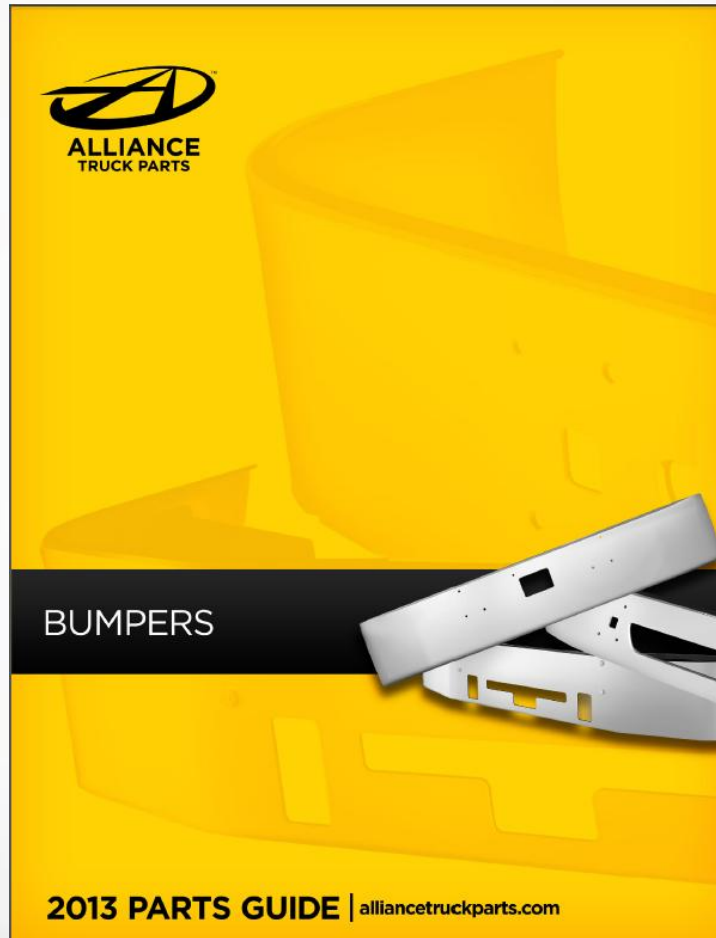

Online Configurator – “Build A Bumper”



To get there:

1. Go to Access Freightliner
2. On left side of screen, click on “Parts Resource Center”
3. In middle of screen there is an Alliance block. Click on text “Bumper Configurator”
4. Configure bumper. When completed, copy part number found near bottom of screen and enter it in Paragon to check price and availability. If part does not exist, enter a POST ticket to request pricing.

The screenshot shows the 'BUILD A BUMPER' configuration tool. At the top left is the Alliance Truck Parts logo. The main heading is 'BUILD A BUMPER'. Below this is a welcome message: 'Welcome to the Alliance Bumper Configuration tool. This tool will help you build a custom bumper for your unit. Simply follow each step to build the bumper you want. Once you have completed the configuration, you will receive a bumper part number and diagram. To order your custom bumper, print the final configuration by clicking the “Print Page” button. Next, click the “Find a Dealer” button at the bottom of the site and take your printed bumper configuration page to your dealer or call your Daimler Trucks North America dealer to place your order.' To the right of the text is a small image of a bumper with the text 'ALLIANCE BUMPERS ALL MAKE BUMPERS FOR YOUR #1 COMMERCIAL TRUCK' and '8373'. Below the image is a link: 'Click here to download. Please be patient, it is a large file.' Below the welcome message are several configuration options, each with a '(change)' link: 'Selected Make : (change) C FREIGHTLINER', 'Selected Model : (change) Y Cascadia', 'Selected Cutout Options: (change) Fogs 0 - None, Steps 0 - None, Hitch 1 - Tow/Hitch Holes, Vents 1 - Vent Holes', 'Selected Material for End Style : (change) Material 10G', and 'Selected End Style : (change) 15 12" Set Back'. Below these options is the text 'No Custom Options available at this time for the above selections.' At the bottom of the configuration area is a 'Bumper Configuration Preview' section, which shows a simple line drawing of a bumper with a 'SET BACK' label and a diagram of the bumper's profile.

Online Configurator – “Build A Bumper”



Daimler Trucks North America LOGOUT My Info

SEARCH HELP SITE MAP CONTACT US DTNA LINKS SUPPLIER LINKS

Welcome Keith Cottrell!

APPLICATIONS

Click the application name below. The application will open in a new window. [More...](#)

FordCPD	OWL™ Online Warranty Link
PartsPro® •Tips & Tricks	WarrantyLit
Paragon	ServicePro®
Centralized Billing Account Information	ServicePro® (without OWL)
Online Business Applications (MAI)	EZWiring™ •Tips & Tricks
Enterprise Reporting	Virtual Technician
Western Star Legacy Info	Recall and Field Service Campaigns

CUSTOMER SATISFACTION

Home • Elite Support (formerly Express Way) • Foresight • Resources • Measures • Best Practices • Customer Support Association (CSA) • Express Assessment

TOOLS & SERVICES

[Aftermarket Resource Center](#) • [Service Training Academy](#) • [STA Training Schedule](#) • [Directory](#) • [Image Portfolio](#) • [Media Room](#) • [Dealers Desktop](#) • [Marcom Center](#) • [Cores](#) • [MarketCenter](#) • [Technical Publications](#) • [Cab & Glider Sales](#) • [Gates OLD Fitting Demo](#) • [Non-DTNA Sales Terms Claim](#) • [Order Merchandise](#) • [Aftermarket Service Products](#)

SUPPORT

[My Tickets](#) • [And Submit an Inquiry](#) • [Request for Replacement Vehicle Documentation](#) • [Knowledge](#)

My Messages

New Campaigns

1 [Recall](#)

1 [Field Service](#)

2 [Letters](#)

Inside

Internet Explorer 8 Update

Please read this important update ...

Updates to Web Links - Bookmarks and Favorites

Reminder - Parts Support Resources

Paragon For Distributors

Go here to find all the latest information.

Hardware and Browser Requirements

Everything you need to know for optimal performance using AccessFreightliner applications.

Applications Sidebar: APPLICATIONS, CUST SATISFACTION, TOOLS & SERVICES, SUPPORT, NEWS & INFORMATION. Logos: DDCSN, MDI, OEConnection, ASP, **Parts Resource Center** (circled), At Your Service, eBulletins, OWL Online Warranty Link.

Daimler Trucks North America LOGOUT

SEARCH HELP SITE MAP CONTACT US DTNA LINKS SUPPLIER LINKS HOME

Parts Resource Center Your first stop for PARTS sales and marketing programs, promotions, tools and links.

News & Information **Programs** **Alliance Parts** **Forms & Guides** **Literature** **Applications** **Links**

THE RETAIL MARKETING PROGRAM

NEW **YOUR COMPREHENSIVE MARKETING SOLUTION**

[Learn more and Enroll...](#)

Increase Your Dealer Profits with Alliance Parts

- Merchandise
- AdBuilder
- Style Guide
- Product Catalog
- Service Kits
- **Roll & Hose Catalog**
- **Bumper Configurator** (circled)

[Visit the Alliance Web Site](#)

Increase Your Parts Sales with these Programs

Adbuilder Program Boost Sales and Promote Your Location

Adbucks Program Advertising dollars for your dealership

Commitment Programs Get the best price when you commit.

Alliance Gift Card Redemption Instructions and Program Details

Order Parts Literature & Pricing CDs online. [Order Form](#)

Training

[Parts Expert](#) Online training & Certification

Parts Marketing Market Attack Plan 2012 EDITION

[View the Market Attack Plan...](#)

Contact Us

[Customer Service Excellence Team](#)

eBulletins

[Online Parts & Service Communications](#)

Literature & Materials

[Order Parts Literature & Pricing CDs online.](#)

[Order Form](#)

Training


[Parts Expert](#) Online training & Certification

Applications Sidebar: APPLICATIONS, CUST SATISFACTION, TOOLS & SERVICES, SUPPORT, NEWS & INFORMATION. Logos: MDI, OEConnection, ASP, Parts Resource Center, At Your Service, eBulletins, OWL Online Warranty Link, DD13 PARTS AND TOOLS ORDERING WEBSITE, SERVICE TRAINING ACADEMY.

Build A Bumper



Step 1: Select Your Make

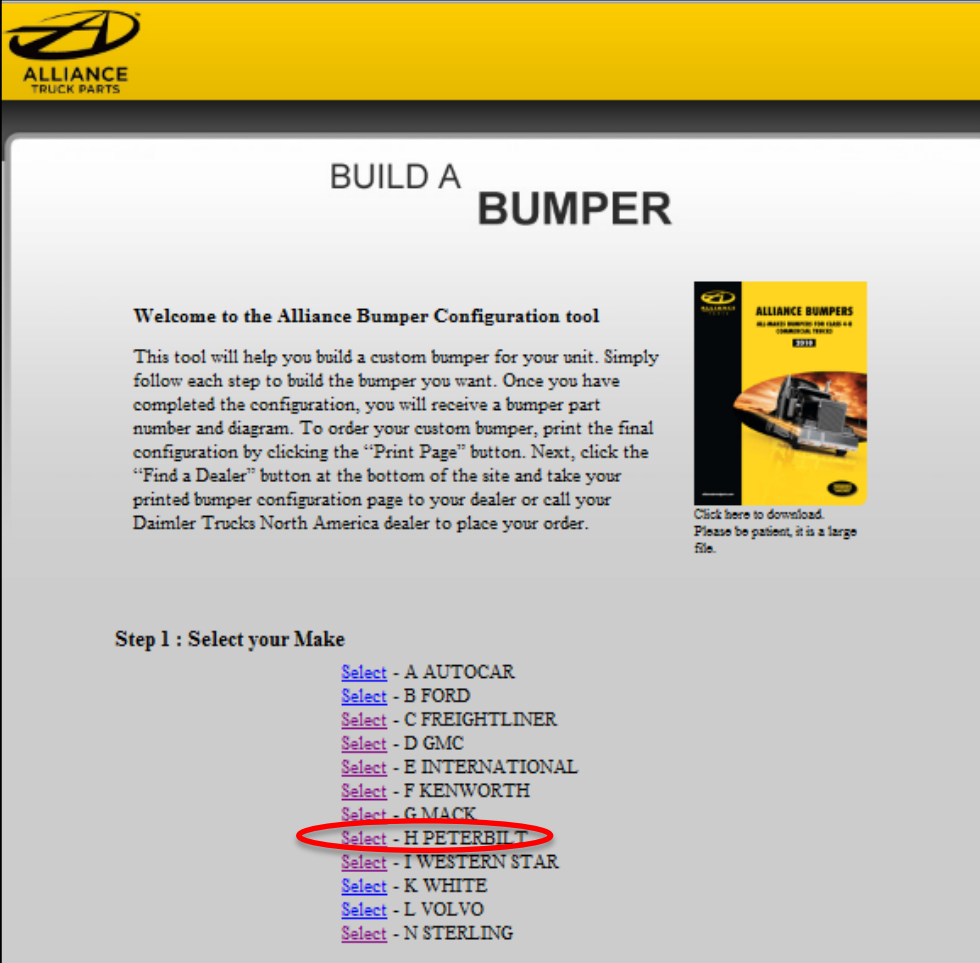


The screenshot shows the 'BUILD A BUMPER' configuration tool interface. At the top left is the Alliance Truck Parts logo. The main heading is 'BUILD A BUMPER'. Below this is a welcome message and a list of truck makes to select from. The 'H PETERBILT' option is circled in red.

ALLIANCE TRUCK PARTS

BUILD A BUMPER

Welcome to the Alliance Bumper Configuration tool

This tool will help you build a custom bumper for your unit. Simply follow each step to build the bumper you want. Once you have completed the configuration, you will receive a bumper part number and diagram. To order your custom bumper, print the final configuration by clicking the "Print Page" button. Next, click the "Find a Dealer" button at the bottom of the site and take your printed bumper configuration page to your dealer or call your Daimler Trucks North America dealer to place your order.



Click here to download.
Please be patient, it is a large file.

Step 1 : Select your Make

- [Select](#) - A AUTOCAR
- [Select](#) - B FORD
- [Select](#) - C FREIGHTLINER
- [Select](#) - D GMC
- [Select](#) - E INTERNATIONAL
- [Select](#) - F KENWORTH
- [Select](#) - G MACK
- [Select](#) - H PETERBILT
- [Select](#) - I WESTERN STAR
- [Select](#) - K WHITE
- [Select](#) - L VOLVO
- [Select](#) - N STERLING

Build A Bumper



Step 2:

Select Your Model

Selected Make : ([change](#))

H PETERBILT

Step 2 : Select Your Model

[Select](#) - A 1967-1986 Conventional 359, 1967-1980 COE 352

[Select](#) - C 378/379 Conventional 1987&Newer

[Select](#) - V "388/389 and 367 (2007 and newer)"

[Select](#) - D 1987-Newer 375 Conv. w/ 2" break back

[Select](#) - E Prior to 1987 Logger

[Select](#) - F 1987-Newer 357 & 379 Logger

[Select](#) - G 357 Logger & 378 SBFA

[Select](#) - H 377 Conv SBFA 1987-1996

[Select](#) - N 377AE SBFA 1997

[Select](#) - I 377 Conv SBFA 1987-1996

Build A Bumper



Step 3:

Select Your Cutouts

Selected Make : ([change](#))

H PETERBILT

Selected Model : ([change](#))

C 378/379 Conventional 1987&Newer

Step 3 : Select Cutout Options

Fogs

Steps

Hitch

Vents

Build A Bumper



Step 4:

Select Your Material

Selected Make : [\(change\)](#)

H PETERBILT

Selected Model : [\(change\)](#)

C 378/379 Conventional 1987&Newer

Selected Cutout Options: [\(change\)](#)

Fogs 2 - 2 Square Lights

Steps 0 - None

Hitch 1 - Tow/Hitch Holes

Vents 0 - None

Step 4 : Select a Material for End Style

[Select](#) - Material 7G


[Select](#) - Material 10G

[Select](#) - Material 10G W/ Back Plates

[Select](#) - Material SS

[Select](#) - Material Paintable

Bumper Configuration Preview

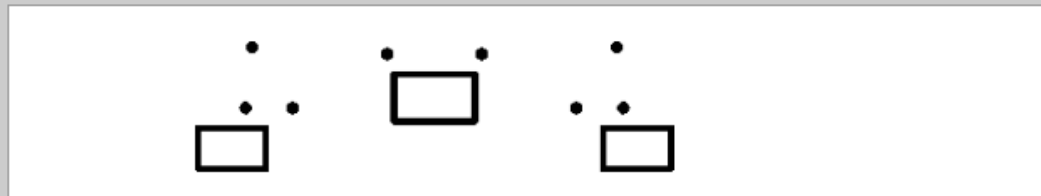

Build A Bumper



Step 5: Select Your End Style

Selected Material for End Style : [\(change\)](#)

Material 10G W/ Back Plates

Step 5 : Select End Style

- [Select](#) - 00 10" Texas Square
- [Select](#) - 01 12" Tapered
- [Select](#) - 02 16" Tapered
- [Select](#) - 03 18" Tapered
- [Select](#) - 04 12" Texas Square
- [Select](#) - 05 16" Texas Square
- [Select](#) - 06 18" Texas Square
- [Select](#) - 09 12" Boxed End
- [Select](#) - 10 16" Boxed End
- [Select](#) - 11 18" Boxed End
- [Select](#) - 21 14" Texas Square
- [Select](#) - 30 14" Tapered
- [Select](#) - 31 20" Tapered
- [Select](#) - 32 22" Tapered
- [Select](#) - 33 24" Tapered
- [Select](#) - 41 20" Texas Square
- [Select](#) - 42 22" Texas Square
- [Select](#) - 43 24" Texas Square
- [Select](#) - 51 20" Boxed End
- [Select](#) - 52 22" Boxed End
- [Select](#) - 53 24" Boxed End
- [Select](#) - 54 12" American Eagle Square End
- [Select](#) - 541T 12" American Eagle Square End w 1" Taper
- [Select](#) - 542T 12" American Eagle Square End w2" Taper
- [Select](#) - 55 16" American Eagle Square End
- [Select](#) - 551T 16" American Eagle Square End w 1" Taper
- [Select](#) - 552T 16" American Eagle Square End w 2" Taper
- [Select](#) - 56 18" American Eagle Square End

Build A Bumper



Step 6:

Select Your Options

Selected Make : [\(change\)](#)

H PETERBILT

Selected Model : [\(change\)](#)

C 378/379 Conventional 1987&Newer

Selected Cutout Options: [\(change\)](#)

Fogs 2 - 2 Square Lights

Steps 0 - None

Hitch 1 - Tow/Hitch Holes

Vents 0 - None

Selected Material for End Style : [\(change\)](#)

Material 10G W/ Back Plates

Selected End Style : [\(change\)](#)

51 20" Boxed End

Step 6 : Select a Custom Option

[Select](#) - 0 None

[Select](#) - 009 9 Oval Lights

[Select](#) - FL01 Frenched License Plate

[Select](#) - L01 License Plate Holes

[Select](#) - R15 15 2" Round Lights

Build A Bumper




Complete!


Copy part number and paste into Paragon. Use web form to request more information or request Paragon part setup.

Selected Material for End Style : [\(change\)](#) Material 10G W/ Back Plates
Selected End Style : [\(change\)](#) 51 20" Boxed End
Selected Custom Option : [\(change\)](#)

Bumper Configuration Preview



Bumper configuration complete. please use the form below to request for a quote.
Please provide your details below (items with * are required).
You will be contacted within 24 hours regarding your bumper.

Selected Part Number **ABP N31 0HC201051** 

Material Selected Material 10G W/ Back Plates

* Name
* Dealer code
* PO #
* Email
* Phone
Comments / Requests

Custom Logos



ALLIANCE
TRUCK PARTS



Custom Lights



Complete Customization



Before



After



Easy to Install

CY Mounting Instructions

2009 Freightliner Cascadia

**Please use the included bolts and hardware.*

Front



Bolt mounting brackets to bottom of frame.

Frame View



Adjust angle of brackets for best fit.

Top



Mount the top extension panels to bumper.

Rear



Attach provided mounting bracket to ear of bumper



Dealer Display



Free to Dealers – order in Paragon part
number: ABP N31 VUXXXX19



Best Sellers Available in PDC



Part Number	Make	Model	Cutouts	HDR Cross Ref	OEM Cross Ref (closest)
ABP N31 0CW001115	FREIGHTLINER	Century 05, Columbia 2004-07	Hitch, Vent		
ABP N31 0CW201115	FREIGHTLINER	Century 05, Columbia 2004-07	2 square fog lights, Hitch, Vent	(N/A)	(N/A)
ABP N31 0CN001115	FREIGHTLINER	Columbia Pre2004	Hitch, Vent	0292SSC or 0293SSC	A21-26266-002
ABP N31 0CY501115X	FREIGHTLINER	Cascadia	2 OEM-style fog lights, Hitch, Vent	0256SSC	
ABP N31 0CY201115X	FREIGHTLINER	Cascadia	2 square fog lights, Hitch, Vent	(N/A)	(N/A)
ABP N31 0CY001115X	FREIGHTLINER	Cascadia	Hitch, Vent	0256NLSSC or 0257NLSSC	A21-28546-018
ABP N31 0CZ1001707	FREIGHTLINER	Coronado 2002-2009	2 round fog lights, Vent	(N/A)	A21-26646-000
ABP N31 0CZ0001707	FREIGHTLINER	Coronado 2002-2009	Vent	(N/A)	A21-26646-001
ABP N31 0CL221015	FREIGHTLINER	Century SBFA 1996-2004	2 square fog lights, Step, Hitch, Vent	(N/A)	
ABP N31 0CI200115	FREIGHTLINER	89-New Conv SBFA FLD112-120	2 square fog lights, Vent		
ABP N31 0IC001006	WESTERN STAR	4900EX,Cornerst,4964,1989-2008	Hitch	0908SQ	
ABP N31 0IC201002	WESTERN STAR	4900EX,Cornerst,4964,1989-2008	2 square fog lights, Hitch	0907	
ABP N31 0EP001115	INTERNATIONAL	91,92,9400 SBFA 13	Hitch, Vent	0420SSC or AM0420SSC	
ABP N31 0HC001006	PETERBILT	378-379 Conv 1987-Newer	Hitch	0804SQ	N71-6011-21211
ABP N31 0HC001002	PETERBILT	378-379 Conv 1987-Newer	Hitch	0804	15-06485F2000

Cross References



- **Coming soon**
- **Alliance to HDR, Alliance to OEM**
- **Examples:**

OEM Part #	HDR Xref	Alliance Xref
A21-26069-003	0276SSC	ABP N31 0CI211115
A21-26069-001	0276SSC	ABP N31 0CI211115
A21-25939-001	0295SSC	ABP N31 0CR022015
A21-26266-002	0293SSC	ABP N31 0CW001115
A21-26266-000	0293SSC	ABP N31 0CW001115

Contacts



CUSTOMER SERVICE

Valley Chrome Plating, Inc.

800-354-0976

DAVE ROGERS

Valley Chrome Plating, Inc.

drogers@valleychrome.com

615-513-3492

TYSON PETTIGREW

Parts Marketing, Daimler Trucks

803-578-3297

Let's sell some bumpers!



ALLIANCE
TRUCK PARTS

