


Freightliner CY Factory Fog Light Mount

diagram 1



diagram 2

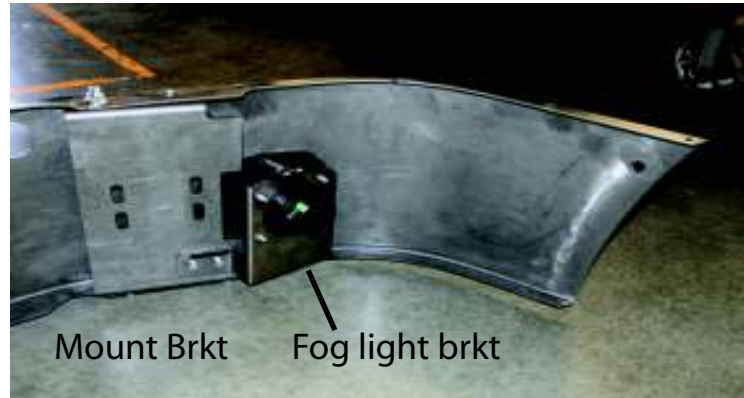

Bumper comes complete with all mounting brackets attached (diagram 1)

1. Remove your factory fog light from your bumper.
2. Save aircraft nuts removed from your bumper (re-use in mounting VCP bumper)
3. Install fog light through face of bumper.
4. Fasten to fog light bracket (do not fully tighten until all adjustments are made)(diagram 2).
5. UST mounting plate, bumper bracket, and fog light brkt are all adjustable. Make sure your bumper and lights are aligned properly before tightening.



View of Fog Light after installation.